

Model #: 501625 Curved Front Electric Fireplaces



Important: Read all instructions and warnings carefully. Failure to follow these instructions may result in a possible electric shock, fire hazard and will void the warranty.

GENERAL PRECAUTIONS

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electrical shock, and injury to persons, including the following:

- 1. Read all instructions before using this heater.**
- 2. Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.**
- 3. Always unplug heater when not in use.**
- 4. Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Return heater to authorized service facility for examination, electrical or mechanical adjustment, or repair.**
- 5. Do not use outdoors.**
- 6. This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate heater where it may fall into a bath but or other water container.**
- 7. Do not run power cord under carpeting. Do not cover power cord with throw rugs, runners, or the like. Arrange power cord away from traffic area and where it will not be tripped over.**
- 8. To disconnect heater. turn controls to off , then remove plug from outlet .**
- 9. Connect to properly grounded outlets only.**
- 10. Do not insert or allow foreign objects to enter any ventilation or exhaust openings as this may cause an electric shock or fire, or damage the heater.**
- 11. To prevent a possible fire, do not block firebox air intakes or exhaust in any manner. Do not operate firebox on soft surfaces, like a bed, where openings may become blocked.**
- 12. A heater has hot and arching or sparking parts inside. Do not use in areas where gasoline, paint, or flammable liquids are used or stored.**
- 13. Use this heater only as described in this manual, Any other use not recommended by the manufacturer may cause fire, electrical shock, or injury to persons.**
- 14. Avoid the use of an extension cord because the extension cord may overheat and cause a risk of fire.**
- 15. This heater may include an audible (a visual) alarm to warn that parts of the heater are getting excessively hot, if the alarm sounds (flashes), immediately turn the heater off and inspect for any objects on or adjacent to the heater that may cause high temperatures. DO NOT OPERATE THE HEATER WITH THE ALARM SOUNDING (FLASHING).**
- 16. “SAVE THESE INSTURCTIONS”**

GENERAL INSTRUCTIONS

- 1. Under no circumstances should this appliance be modified parts having to be removed for servicing must be replaced with original 'OEM' (original equipment manufacturers) parts only.**
- 2. This firebox is to be cleaned with a damp cloth (water) only.**

WARNING: **Always unplug the power cord before cleaning the unit.**

Do not use any abrasive cleaners on the unit.

- 3. Please unplug this firebox when not in use.**
- 4. The fire incorporates a flame effect, which can be used with or without heater, so that the comforting effect may be enjoyed at any time of the year, Using the flame effect on its own only requires little electricity.
Before connecting the heater checks that the supply voltage is the same as that stated on the heater.**
- 5. Unpack the heater carefully and retain the packaging for possible future use, in the even of moving or returning the fire to your supplier.
The fire incorporates a flame effect, which can be used with or without heater, so that the comforting effect may be enjoyed at any time of the year, Using the flame effect on its own only requires little electricity.
Before connecting the heater checks that the supply voltage is the same as that stated on the heater.**

WARNING – THIS APPLIANCE MUST BE GROUNDED.

This heater must be used on AC – supply only and the voltage marked on the heater must correspond to the supply voltage. Before switching on, please read the safety warnings and operating instructions.

WARNING: Electrical outlet wiring must comply with local building codes and other applicable regulations to reduce the risk of fire, electrical shock and injury to persons.

WARNING: Do not use this fireplace insert if any part of it has been under water. Immediately call a qualified service technician to inspect the firebox and replace any part of the electrical system, which has been under water.

6. When choosing a location for your new fireplace, ensure the general instructions are followed. Also, for the best effect install the fireplace out of direct sunlight.
7. It is safe to set the fireplace insert close to non-combustibles.

WARNING: DO NOT STORE OR USE GASOLINE OR OTHER FLAMMABLE VAPORS OR LIQUIDS IN THE VICINITY OF THIS OR ANY OTHER APPLIANCE.

Specifications

Model #: 501625 Curved Front Electric Fireplaces

Fireplace Insert dimensions (W x D x H)	66cm x 33.2cm x 47cm
Net Weight	16.8kg
Gross Weight	19.1kg
Voltage	120V
Frequency	60 Hz
Watts / Amps	1400W / 12 A
Heater Rating	1400W

Operating Instructions

1. After reading these instructions confirm that all controls on the heater are in the OFF position. Plug the heater into 12 amp, 120-volt outlet.
2. All controls and switches are on the front panel of the heater located inside the right hand door.

REMOTE CONTROL



Memory Switch

Only work when the Power is on. Memorize the current ON state, and OFF all the function. It will return to its previous state when press this button again. When switch OFF, it will cancel the Timing Shut Down setting, and the brightness level will recover to “5”.



Flame Brightness

Press \wedge adjust the brightness level higher,
Press \vee adjust the brightness level lower



Temperature Control

Press \wedge adjust the temperature level higher,
press \vee adjust the temperature level lower

The fireplace has six temperature settings. 60°C (99°F) → 30°C (86°F) → 28°C (82°F) → 26°C (78°F) → 24°C (75°F) → 22°C (71°F) → OFF. (Cycle)



Down Light

Switch ON/OFF the Down light. Down light composed by 2 pcs LED light board.
Only for ON/OFF



Timer

Set the OFF time, time range: No setting----- (cycle)

 
→10→20→30→40→50→1H→2H→3H→4H→5H→6H→7H→8H→9H



Embers/Dynamic Effect

Control button for dynamic effect in automatic mode, enter/ exit Effect function.

Manual controls



Power

When power is ON, the power and flame indicator lights are on, and brightness level is at "5".



Flame Brightness

 
Flame comes from LED light board and has 5 brightness levels:

full bright---high bright—Medium—low bright--tiny bright

Motor output terminal control the 5W reflector motor, control ON/OFF, and cooperate with flame.

Log light: comes from LED light, together with flame, and has 5 brightness levels:

full bright---high bright—Medium—low bright--tiny bright



Temperature Control

The fireplace has 7 temperature settings (□ or □):

60□ (99□) →30□ (86□) →28□ (82□) →26□ (78□) →24□ (75□) →22□ (71□) →OFF. (Cycle)



Down Light

Switch ON/OFF the Down light. Down light composed by 2 pcs LED light board.

Only for ON/OFF



Timer

Set the OFF time, time range: No setting----- (cycle)

→10→20→30→40→50→1H→2H→3H→4H→5H→6H→7H→8H→9H

Glass Information

1. Under no circumstances should this product be operated with a broken or chipped glass panels.
2. Do not strike or slam the glass.
3. Do not use abrasive cleansers to clean the glass.
4. This product uses tempered glass. Replacement of the glass supplied by the manufacturer should be done by a qualified professional.

Light Emitting Diode

This fire is fitted with LED (Light Emitting Diode) bulbs in place of conventional bulbs. These generate the same light levels as conventional bulbs, but use a fraction of the energy consumed. These LED bulbs are maintenance –free and will not require replacing during the life of the product.

Cleaning

WARNING – ALWAYS DISCONNECT FROM THE POWER SUPPLY BEFORE CLEANING THE HEATER



Fig.1



Fig.2

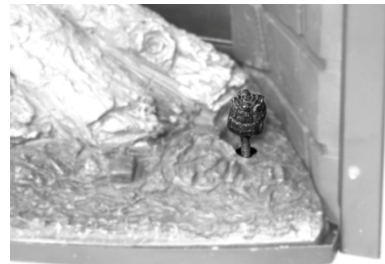


Fig.3

For general cleaning use a soft clean duster – never use abrasive cleaners. The glass-viewing screen should be cleaned carefully with a soft cloth. **DO NOT** use proprietary glass cleaners. To remove any accumulation of dust or fluff the soft brush attachment of a vacuum cleaner should occasionally be used to clean the outlet grille of the fan heater.